
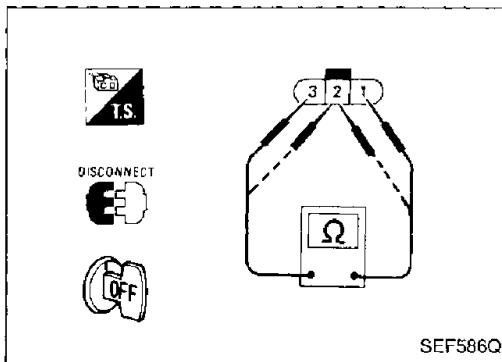


# TROUBLE DIAGNOSIS FOR DTC P0130

## Front Heated Oxygen Sensor (Front HO2S) (Right bank) (DTC: 0503) (Cont'd)

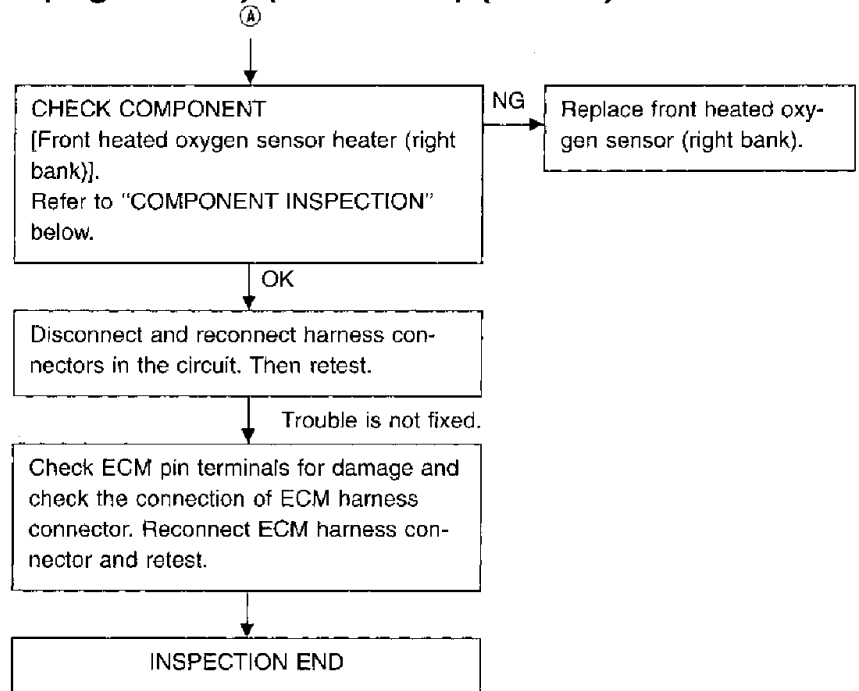

### COMPONENT INSPECTION

#### Front heated oxygen sensor heater

Check resistance between terminals ③ and ① .

**Resistance: 2.3 - 4.3Ω at 25°C (77°F)**

Check continuity between terminals ② and ① , ③ and ② .

**Continuity should not exist.**

If NG, replace the front heated oxygen sensor.

#### CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.