

# AMBIENT SENSOR

< ON-VEHICLE REPAIR >

[WITH COLOR DISPLAY]


## AMBIENT SENSOR

### Removal and Installation

INFOID:000000005462450

#### REMOVAL

1. From under the vehicle, disconnect the ambient sensor connector.
2. Release the ambient sensor clip and remove the ambient sensor (1).

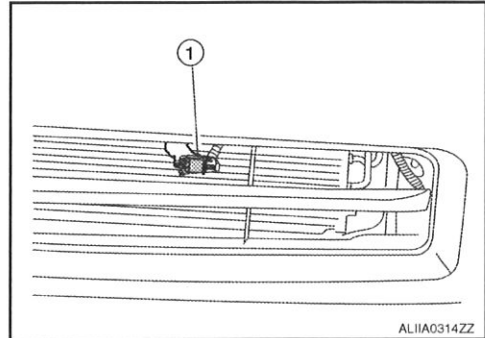

#### INSTALLATION

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P